

WHEEL/SPOKES

Check the wheel spokes for tightness periodically.

TORQUE:

20 – 45 kg-m (25 – 52 ft-lb)

REAR WHEEL SPROCKET

Check the tightness of the sprocket retaining screws after every trial.

STEERING HEAD BEARINGS

Journal Ball Type Steering Head Bearings are fitted and are non-adjustable.

NOTE:

Check the control wires do not interfere with the rotation of the handlebars.