

OIL FILTER ROTOR CLEANING

NOTE:

Clean the oil filter rotor before adding oil.

Remove the kick starter pedal and rear brake pedal.

Disconnect the clutch cable from the clutch lever by loosening the adjuster.

Remove the right crankcase cover.

Clean the oil filter rotor.

Make sure that the rotor cover gasket is in good condition and install the oil filter rotor cover.

Install the dowel pins and gasket.

Install the right crankcase cover.

Install the brake pedal.

Connect the clutch cable.

Install the kick starter pedal.

Adjust the rear brake pedal.

Adjust the clutch lever free play and check the clutch operation.

Fill the crankcase with the recommended grade oil.

Check the oil level and look for leaks.

S.A.E. 10W/40

