


ENGINE OIL LEVEL CHECK

Support the motorcycle upright on the level ground. Check the oil level with the oil cap/dipstick. Do not screw in the cap when making this check.

If the oil level is below the lower level mark on the dipstick, fill to the upper level mark with the recommended oil. S.A.E. 10W/40.

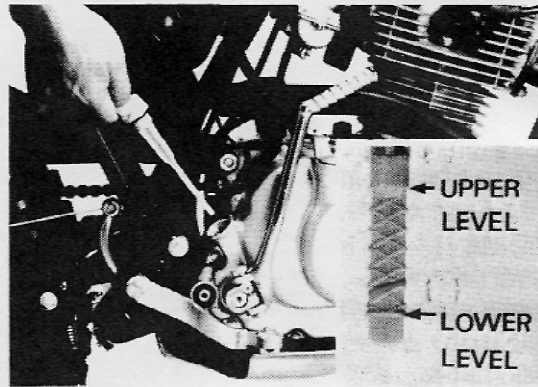

ENGINE OIL CHANGE AND OIL FILTER SCREEN CLEANING

NOTE:

Drain the oil with the engine warm and the motorcycle on its side stand.

Remove the oil filler cap and filter screen cap.

NOTE:

The oil filter screen and spring will come out when the oil filter screen cap is removed.

Operate the kick starter pedal several times to completely drain any residual oil.

Clean the oil filter screen.

Make sure that the oil filter screen, sealing rubber, screen cap and O-ring are in good condition.

Install the oil filter screen, spring and screen cap.

Fill the crankcase with the recommended grade oil. S.A.E. 10W/40.

ENGINE OIL CAPACITY

1.0 litre (1.06 US qt., 0.88 Imp. qt.)

Install the oil filler cap.

Start the engine and let it idle for 2-3 minutes.

Stop the engine.

With the motorcycle upright on level ground, make sure that the oil level is at the upper level mark.

Be sure there are no leaks.

